


Assembly Instructions For


WB1341 (E) 10/07

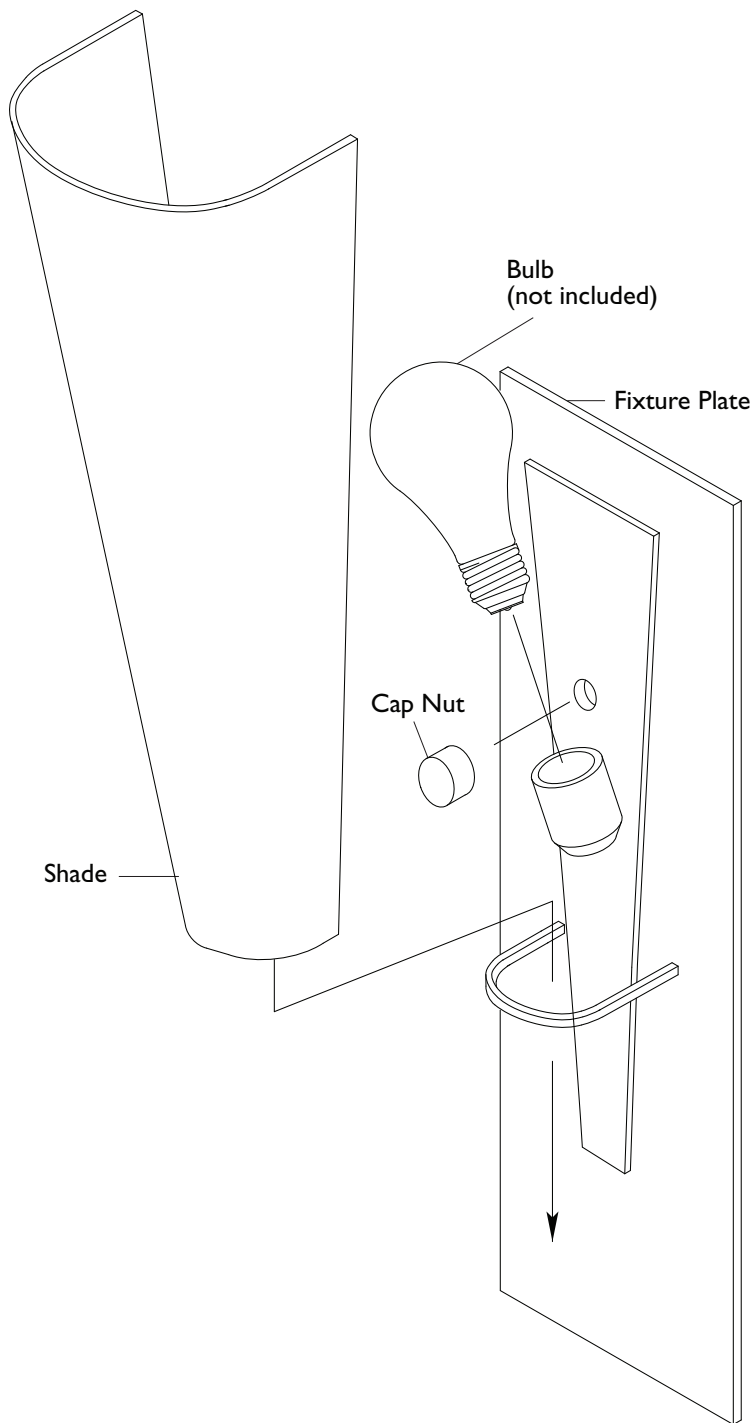

IMPORTANT
TURN OFF THE POWER AT THE MAIN FUSE OR
CIRCUIT BREAKER BOX
BEFORE STARTING INSTALLATION

Carefully unpack and identify all parts before assembly. Bulbs not included.

1. Before proceeding below instructions follow enclosed "Multiple Standard Installation Instructions" for electrical and fixture installation onto wall outlet box.
2. Carefully slip glass shade over mounting bracket onto fixture backplate. When slipping glass in, keep glass over mounting bracket. Take care not to slide down over backplate as glass may scratch surface of backplate.
3. Install bulb (not included). See relamping label located at socket area for type and maximum allowed wattage.

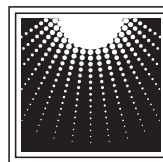

MURRAY
F E I S S

Generation Brands™